



**Active Cooled Laser Diode
Horizontal Arrays**

**Up to 120W CW
Center Wavelength: 808-980nm**

Introduction

Apollo Instruments' high-powered laser diode bars deliver up to 120W in CW. They are available in the following wavelengths:

808 nm
915 nm / 940 nm / 976 nm / 980nm

These laser diode bars are micro-channel water-cooled. They have been demonstrated to be of high quality with long lifetime.

Key Features

- High power
- Long lifetime
- Narrow spectrum
- Easy to repair
- Wavelength 808-980nm
- CW operation
- Fast delivery time

Applications

- DPSSL & Fiber Laser Pumping
- Medicine
- Selective Soldering/Desoldering
- Heat Treatment
- Welding/Blazing
- Quick Cure of Epoxy
- Transformation Hardening
- And more

Active Cooled Laser Diode (Horizontal Arrays) – Specification Sheet

HA-CW-092011

Specifications

	Units	HAXx-Y -60-808 ¹	HAXx-Y -60-808 ¹	HAXx-Y -80-808 ¹	HAXx-Y -100-808 ¹	HAXx-Y -100-808 ¹
Optical Specifications ^{3,5}						
Center wavelength, λ	nm	808 \pm 3	808 \pm 3	808 \pm 3	808 \pm 3	808 \pm 3
Output power per bar ²	W	60	60	80	100	100
Number of bars	-	2 to 25				
Fill factor	%	30	50	50	50	50
Number of emitters	-	19	47	47	25	47
Emitter width	μ m	150	100	100	200	100
Spectral width FWHM	nm	\leq 3				
Spectral width FW90%E	nm	\leq 6				
Fast axis divergence (FWHM)	$^{\circ}$	35				
Slow axis divergence (FWHM)	$^{\circ}$	8				
Polarization mode	-	TE/TM	TE	TE	TE	TE
Wavelength temp. coefficient	nm/ $^{\circ}$ C	\sim 0.28				
Electrical Parameters ^{3,5}						
Operating current, I_{op}	A	\leq 70	\leq 70	\leq 88	\leq 110	\leq 110
Threshold current, I_{th}	A	\leq 11	\leq 18	\leq 22	\leq 25	\leq 21
Operating voltage, V_{op}	V	\leq 2				
Slope efficiency	W/A	\geq 1.1				
Power conversion efficiency	%	\geq 50	\geq 48	\geq 50	\geq 50	\geq 50
Thermal Parameters						
Operating temperature	$^{\circ}$ C	15 to 35				
Storage temperature ⁴	$^{\circ}$ C	-40 to 60				
Coolant	-	Deionized water				
Flow rate per bar	L/min	0.25 to 0.30				

1. Model Name Breakdown - HAXx-Y-60-808: xx = Structure Code (04), Y = Number of bars, 60 = Output power (W), 808 = Center wavelength (nm).
2. Reduced lifetime if used above nominal operating conditions.
3. Data at 25 $^{\circ}$ C temperature, unless otherwise stated.
4. A non-condensing environment is required for storage and operation below ambient dew point.
5. If there are any other requirements, please contact us.

IMPORTANT NOTICE: APOLLO INSTRUMENTS, INC. RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS AT ANY TIME WITHOUT NOTICE. NO LICENSE IS GRANTED BY IMPLICATION OR OTHERWISE UNDER ANY PATENTS OR PATENT RIGHTS OF APOLLO INSTRUMENTS, INC., OR OTHERS. THESE COMPONENTS DO NOT COMPLY WITH THE FEDERAL REGULATIONS (21CFR SUBCHAPTER 1) AS ADMINISTERED BY THE CENTER FOR DEVICES AND RADIOLOGICAL HEALTH. PURCHASER ACKNOWLEDGES THAT HIS/HER PRODUCTS MUST COMPLY WITH THESE REGULATIONS BEFORE THEY CAN BE SOLD TO A CUSTOMER. NO RESPONSIBILITY IS ASSUMED FOR THE USE OF THESE PRODUCTS, NOR FOR ANY INFRINGEMENT ON THE RIGHTS OF OTHERS RESULTING FROM THE USE OF THESE PRODUCTS. COPYRIGHT APOLLO INSTRUMENTS, INC. ALL RIGHTS RESERVED. Copyright©2007 Apollo Instruments, Inc. 55 Peters Canyon Road, Irvine, CA 92606 TEL) 949-756-3111, FAX) 949-756-9166 www.apolloinstruments.com

Active Cooled Laser Diode (Horizontal Arrays) – Specification Sheet

HA-CW-092011


	Units	HAXx-Y -80-915	HAXx-Y -80-940	HAXx-Y -120-940	HAXx-Y -80-976	HAXx-Y -120-980
Optical Specifications ^{3,5}						
Center wavelength, λ	nm	915 \pm 3	940 \pm 3	940 \pm 10	976 \pm 3	980 \pm 10
Output power per bar ²	W	80	80	120	80	120
Number of bars	-	2 to 25				
Fill factor	%	20	20	50	30	50
Number of emitters	-	19	19	25	19	25
Emitter width	μ m	100	100	200	150	200
Spectral width FWHM	nm	\leq 4				
Spectral width FW90%E	nm	\leq 7	\leq 7	\leq 6	\leq 7	\leq 6
Fast axis divergence (FWHM)	$^{\circ}$	35				
Slow axis divergence (FWHM)	$^{\circ}$	8				
Polarization mode	-	TE				
Wavelength temp. coefficient	nm/ $^{\circ}$ C	\sim 0.31	\sim 0.32	\sim 0.32	\sim 0.34	\sim 0.32
Electrical Parameters ^{3,5}						
Operating current, I_{op}	A	\leq 80	\leq 82	\leq 120	\leq 84	\leq 120
Threshold current, I_{th}	A	\leq 8	\leq 7.5	\leq 20	\leq 9	\leq 20
Operating voltage, V_{op}	V	\leq 2	\leq 2	\leq 1.8	\leq 2	\leq 1.8
Slope efficiency	W/A	\geq 1.1	\geq 1.1	\geq 1.1	\geq 1.05	\geq 1.1
Power conversion efficiency	%	\geq 55	\geq 55	\geq 52	\geq 55	\geq 52
Thermal Parameters						
Operating temperature	$^{\circ}$ C	15 to 35				
Storage temperature ⁴	$^{\circ}$ C	-40 to 60				
Coolant	-	Deionized water				
Flow rate per bar	L/min	0.25 to 0.30				

1. Model Name Breakdown - HAXx-Y-60-808: xx = Structure Code (04), Y = Number of bars, 60 = Output power (W), 808 = Center wavelength (nm).
2. Reduced lifetime if used above nominal operating conditions.
3. Data at 25 $^{\circ}$ C temperature, unless otherwise stated.
4. A non-condensing environment is required for storage and operation below ambient dew point.
5. If there are any other requirements, please contact us.

IMPORTANT NOTICE: APOLLO INSTRUMENTS, INC. RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS AT ANY TIME WITHOUT NOTICE. NO LICENSE IS GRANTED BY IMPLICATION OR OTHERWISE UNDER ANY PATENTS OR PATENT RIGHTS OF APOLLO INSTRUMENTS, INC., OR OTHERS. THESE COMPONENTS DO NOT COMPLY WITH THE FEDERAL REGULATIONS (21CFR SUBCHAPTER 1) AS ADMINISTERED BY THE CENTER FOR DEVICES AND RADIOLOGICAL HEALTH. PURCHASER ACKNOWLEDGES THAT HIS/HER PRODUCTS MUST COMPLY WITH THESE REGULATIONS BEFORE THEY CAN BE SOLD TO A CUSTOMER. NO RESPONSIBILITY IS ASSUMED FOR THE USE OF THESE PRODUCTS, NOR FOR ANY INFRINGEMENT ON THE RIGHTS OF OTHERS RESULTING FROM THE USE OF THESE PRODUCTS. COPYRIGHT APOLLO INSTRUMENTS, INC. ALL RIGHTS RESERVED. Copyright©2007 Apollo Instruments, Inc. 55 Peters Canyon Road, Irvine, CA 92606 TEL) 949-756-3111, FAX) 949-756-9166 www.apolloinstruments.com

Dimensions Diagram (measurements in mm unless specified)

- HA04

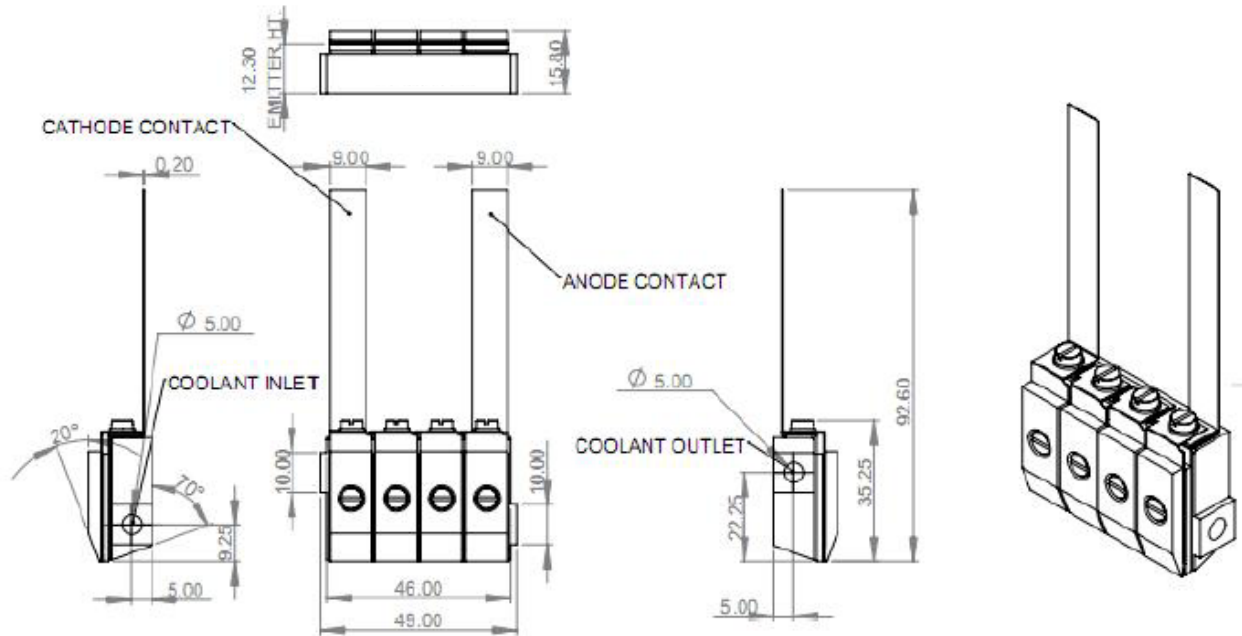

Ordering Information

To make an order or request for further information on this or other products, please contact our sales representative by phone (949) 756-3111 or email contact@apolloinstruments.com.

Laser Safety

High Power Diode Lasers emit radiation in the visible and infrared region of the spectrum. When in use, safety precautions should be taken to avoid possibility of eye damage. For Class IV lasers, extreme care must be exercised during their operation. Do not allow exposure of the eye or skin to direct or scattered radiation. If viewing is required, the beam should be observed by reflection from matte surface utilizing an image converter or a suitable fluorescent screen. Serious injury may result if any part of the body is exposed to the beam. The eye is extremely sensitive to the infrared radiation and therefore, proper eyewear must be worn at all times.

The laser products made by Apollo Instruments emit visible and invisible radiation power. The devices are intended for use by qualified personnel who recognize shock hazards or laser hazards and are familiar with safety precautions required to avoid possible injury.

IMPORTANT NOTICE: APOLLO INSTRUMENTS, INC. RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS AT ANY TIME WITHOUT NOTICE. NO LICENSE IS GRANTED BY IMPLICATION OR OTHERWISE UNDER ANY PATENTS OR PATENT RIGHTS OF APOLLO INSTRUMENTS, INC., OR OTHERS. THESE COMPONENTS DO NOT COMPLY WITH THE FEDERAL REGULATIONS (21CFR SUBCHAPTER 1) AS ADMINISTERED BY THE CENTER FOR DEVICES AND RADIOLOGICAL HEALTH. PURCHASER ACKNOWLEDGES THAT HIS/HER PRODUCTS MUST COMPLY WITH THESE REGULATIONS BEFORE THEY CAN BE SOLD TO A CUSTOMER. NO RESPONSIBILITY IS ASSUMED FOR THE USE OF THESE PRODUCTS, NOR FOR ANY INFRINGEMENT ON THE RIGHTS OF OTHERS RESULTING FROM THE USE OF THESE PRODUCTS. COPYRIGHT APOLLO INSTRUMENTS, INC. ALL RIGHTS RESERVED. Copyright©2007 Apollo Instruments, Inc. 55 Peters Canyon Road, Irvine, CA 92606 TEL) 949-756-3111, FAX) 949-756-9166 www.apolloinstruments.com

ESD - Like most semiconductor devices, laser diodes can be easily damaged or destroyed by inadvertent electrical or static discharges. Laser Diodes are very sensitive to electrostatic discharge (ESD) and may suffer latent catastrophic damage unless they are handled according to proper ESD procedures. The resulting decreased performance of the laser may appear immediately, or long after the damage occurs. A static free environment is mandatory. Grounded tweezers and a grounded wrist strap on the user, a grounded work surface, anti-static floors and case ground for the laser diode all reduce risk of damaging static discharge through the diode. Retain the laser diode in a static free environment when not in use (such as the shipping container). Short the diodes at all times when not in use. (Note: An unshorted laser can be damaged by ESD even without touching it!) The user should never try to service and repair the device without authorization of Apollo Instruments. Apollo Instruments is not responsible to any damages resulted by unauthorized repair and services. Any attempt to opening the laser unit will void the limited warranty to the device.